


THROUGH HOLE MAY REQUIRE SANDING TO ACHIEVE $\frac{7}{8}$ " DIMENSION

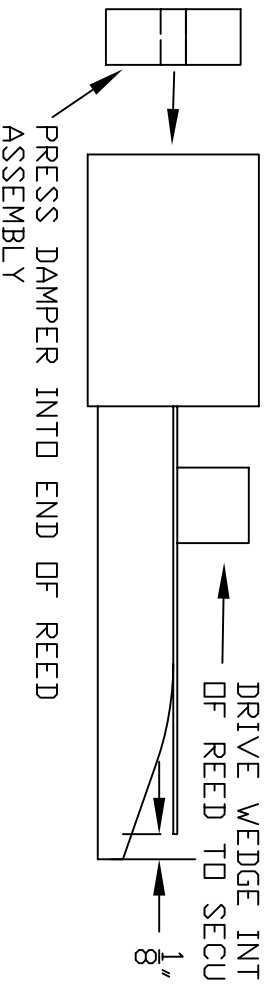

DRIVE WEDGE INTO BARREL ON TOP OF REED TO SECURE REED IN PLACE.

PRESS DAMPER INTO END OF REED ASSEMBLY

**CUSTOM SAWING
CADIZ, KENTUCKY**

DWL HOOPER

**TYPICAL BARREL &
ASSEMBLY DIMENSIONS**

REV. - 0

DCT. 5, 2003